

JBC

www.jbctools.com

INSTRUCTION MANUAL



Stand for AM120 and PA120 Tweezers

Ref. AM-SA

Packing List

The following items are included in each stand:


Stand for AM120 and PA120 Micro Tweezers1unit
Ref. AM-SA



Stand Cable 1m..... 1 unit
Ref. 0011283




Manual 1 unit
Ref. 0022401

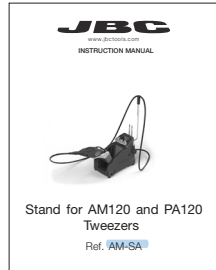

Features

Control Unit

(Required but not supplied)

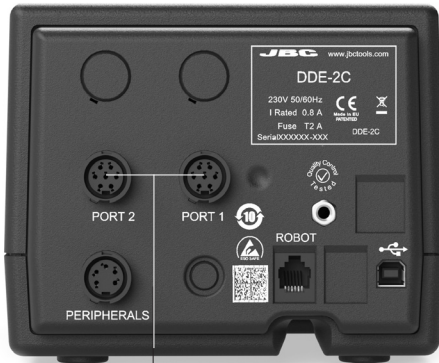

Stand

Ref. AM-SA



C120 Cartridges

(Required but not supplied)



Adjustable Micro Tweezers

Ref. AM120-A

(Required but not supplied)



C120 Cartridges

(Required but not supplied)




Adjustable Micro Tweezers

Ref. PA120-A

(Required but not supplied)



Assembly: Cable Collector and Adjustable Tool Holder

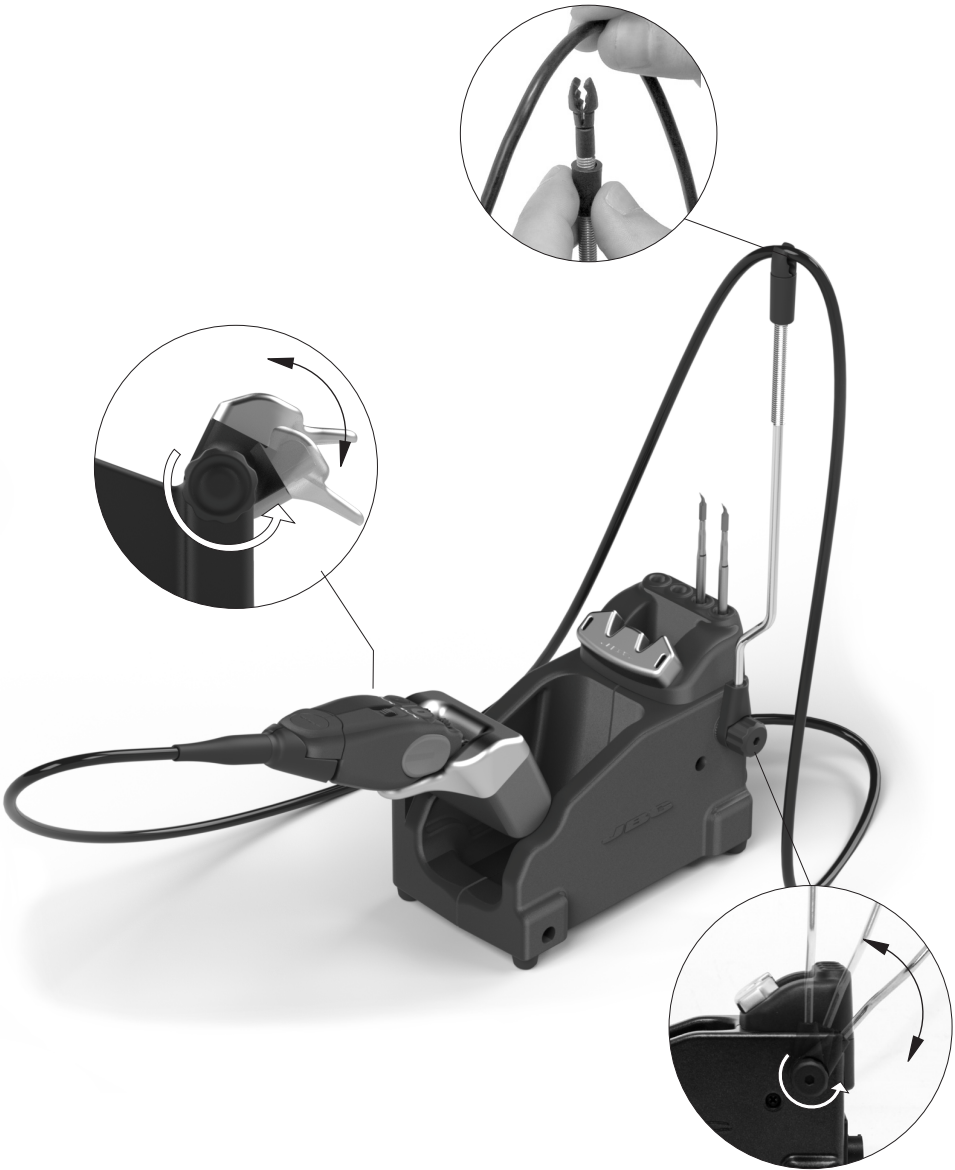

AM120 Changing cartridges

1. Unlocking




Unlock the fixing screws.

2. Removing



Place the cartridges in the extractor and pull the tweezers to remove them.

3. Positioning

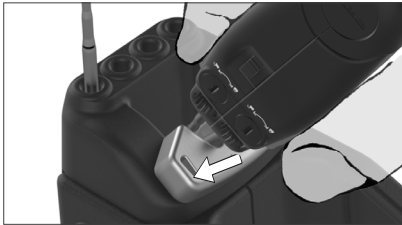

Place the tweezers on top of the new cartridge and slightly press down.


4. Inserting




Use the grooves to insert the cartridges as far as the mark*.

*Important

It is essential to insert the cartridges as far as the mark for a proper connection.

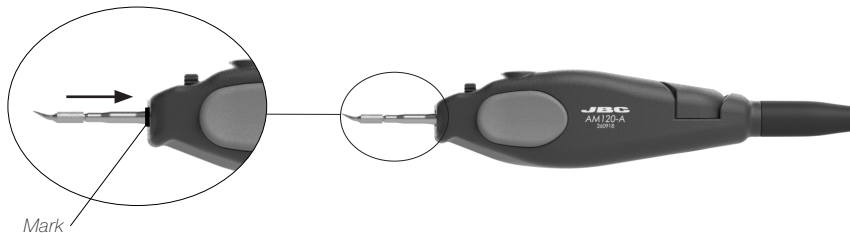


5. Rotational Cartridge Alignment and Loking

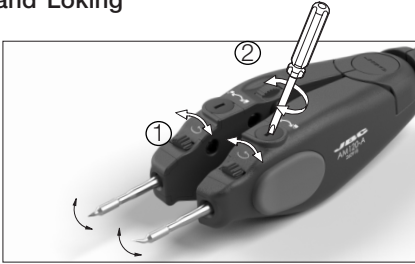

① Slightly turn the wheels to align the cartridges as required. ② Lock the fixing screws*.

6. Vertical Cartridge Alignment

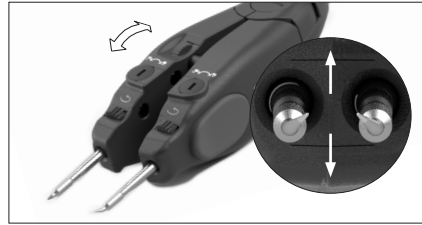


The rear wheel allows the cartridges to be equally aligned when you close the tweezers.

! *Once the alignment has been made, do not forget to fix the cartridges by tightening the fixing screws. A single turn of the screw is required to get them fixed.

PA120-A Changing cartridges

1. Unlocking

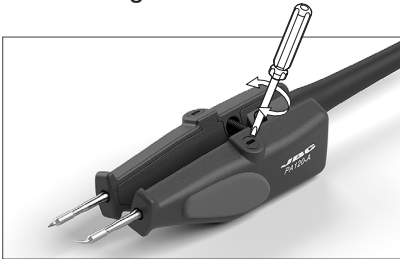

Unlock the fixing screws.

2. Removing




Place the cartridges in the extractor and pull the tweezers to remove them.

3. Inserting



Use the grooves to insert the cartridges as far as the mark*.

4. Locking

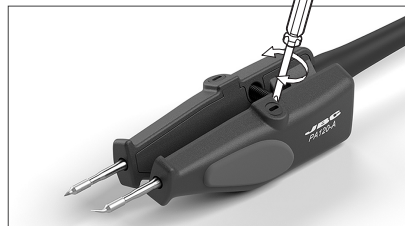

Lock the fixing screws.

Accessories



Maintenance

Before carrying out maintenance or storage, always unplug the stand from the station and the tool.

- Use a damp cloth to clean the stand. Alcohol can be used only when cleaning the metal parts.
- Check periodically that the metal parts of the tool/stand are clean so that the station can check the tool's status.
- Periodically check all cables and tube connections.
- Replace any defective or damaged parts. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.



Safety



It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.

- Do not use the units for any purpose other than soldering or rework. Incorrect use may cause fire.
- The power cord must be plugged into approved bases. Be sure that it is properly grounded before use. When unplugging it, hold the plug, not the wire.
- Do not work on electrically live parts.
- The tool should be placed in the stand when not in use in order to activate the sleep mode. The soldering tip, the metal part of the tool and the stand may still be hot even when the station is turned off. Handle with care, including when adjusting the stand position.
- Do not leave the appliance unattended when it is on.
- Do not cover the ventilation grills. Heat can cause inflammable products to ignite.
- Avoid the contact of flux with skin or eyes to prevent irritation.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight and also persons with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.

Notes

Specifications

AM-SA

- | | |
|----------------------|------------------------------------------|
| - Includes | Sleep Mode and Hibernation Mode |
| - Net Weight | 1.3 kg (2.9 lb) |
| - Package Weight | 1.6 kg (3.5 lb) |
| - Package Dimensions | 342 x 155 x 120 mm (13.5 x 6.1 x 4.7 in) |

Complies with CE standards
ESD Safe

JBC

Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

Get 1 extra year JBC warranty by registering here:
<https://www.jbctools.com/productregistration/>
within 30 days of purchase.



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.

